

*Sunbeam*

**Coney Island Steamer**



**Frank 'n Bun**

**Instructions  
& Recipes**

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical hazards do not immerse cord, plug, or cooker in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause hazards.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot liquids.
12. To disconnect, remove plug from wall outlet.
13. Do not use appliance for other than intended use.


# SAVE THESE INSTRUCTIONS

Tasting that great hot dog flavor and a soft bun, smothered in thick, spicy Coney Island Sauce will take you back to the excitement and thrills of the Coney Island style amusement park with it's ferris wheels, roller coasters, carnival booths, and the famous Coney Island hot dog stands. Now you can enjoy the good times and good tastes of Coney Island right in your own kitchen with the Sunbeam Coney Island Hot Dog and Bun Steamer.

The single-serving size steamer is great for lunches, snacks, or anytime you want to enjoy one of America's favorite sandwiches!


Your Sunbeam Coney Island Hot Dog and Bun Steamer is intended for household use only. Please read the following instructions for easy use of the steamer.

## FEATURES OF THE HOT DOG AND BUN STEAMER

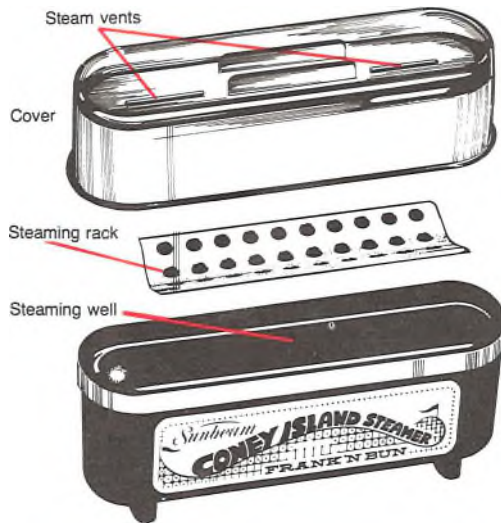


## USING THE HOT DOG AND BUN STEAMER

Before using the steamer for the first time, wash the cover and the steaming rack in warm, soapy water. Rinse thoroughly and dry. Wipe the inside of the steamer with a damp cloth. DO NOT IMMERSE THE STEAMER IN WATER.

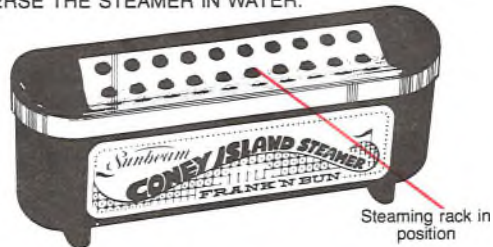

Place the steamer on a level surface. Pour 1 ounce of water into the steaming well. Place the steaming rack in position over the water, resting the edges of the rack on the inside ledge of the steamer.

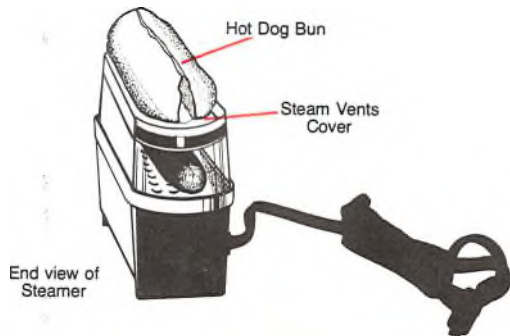

Place one fully pre-cooked hot dog on the steaming rack, place the cover on the unit.

Position a hot dog bun over the center of the cover so that the slit edges of the bun rest in the grooves on each side of the center steam openings.

Plug the electrical cord into a 120 volt, 60 Hz AC outlet. The steamer will immediately begin to heat and you will see steam beginning to form on the inside of the cover.

Allow the hot dog and bun to steam for 5 minutes. After 5 minutes, unplug the steamer from the electrical outlet. You may wish to steam frozen hot dogs and buns for just a while longer.

Remove the bun, and carefully lift the cover so you can remove the hot dog.

If more hot dogs and buns are to be steamed, repeat this procedure.

## CLEANING THE HOT DOG AND BUN STEAMER

Unplug the steamer from the electrical outlet and allow it to cool.

Wash the cover and the steaming rack in warm, soapy water. Rinse thoroughly and dry.

Place a small amount of warm, soapy water in the steamer. Use a dishcloth to wipe the inside of the unit. **DO NOT IMMERSE THE STEAMER IN WATER.** Add clear water to the steamer and rinse. Dry thoroughly. Wipe the outside of the steamer with a damp cloth, then with a dry cloth to polish.

## STORAGE

Store the steamer in a dry location such as a cupboard or closet shelf.

Wrap the electrical cord loosely around the outside of the unit and secure it with the cord lock on the plug.

## MAINTENANCE

Other than the recommended cleaning, no further user-maintenance should be necessary. Return the steamer to your nearest authorized Sunbeam Appliance Service Company representative for any servicing or repair.

## ELECTRIC CORD

A short power supply cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord. Longer cord sets or extension cords are available and may be used if care is exercised in their use. If a longer cord or extension cord is used, the marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the counter top or table top where it can be pulled on by children, or tripped over accidentally.

## CONEY ISLAND DOGS

Fully pre-cooked hot dogs  
Hot dog buns  
1 recipe Coney Island Sauce  
Prepared mustard  
Chopped onion

Prepare hot dogs and buns with the Sunbeam Hot Dog and Bun Steamer. Place steamed hot dog inside bun. Spoon heated Coney Island Sauce over hot dog. Top with prepared mustard and chopped onion.

## CONEY ISLAND SAUCE

½ lb. ground beef	⅛ tsp. black pepper
⅓ cup chopped onion	1 tsp. chili powder
2 cloves garlic, minced	¾ tsp. monosodium glutamate
1-8 oz. can tomato sauce	¾ tsp. salt
1 Tbsp. water	

Brown ground beef, onion, and garlic in frypan. Drain grease. Add remaining ingredients. Simmer mixture until thoroughly heated.

Yield: 1½ cups

## CHILI GRANDE DOGS

Fully pre-cooked hot dogs  
Hot dog buns  
1—15 oz. can chili with beans,  
or your favorite homemade chili recipe

Prepare hot dogs and buns with the Sunbeam Hot Dog and Bun Steamer. Place steamed hot dog inside bun. Spoon heated chili with beans over the hot dog.

## THE ALP

Fully pre-cooked hot dogs  
Hot dog buns  
1 medium onion, chopped  
1 medium tomato, chopped  
1 medium green pepper, chopped  
Swiss cheese, sliced in strips  
Pickles relish

Prepare hot dogs and buns with the Sunbeam Hot Dog and Bun Steamer. Place steamed hot dog inside bun. Top with onion, tomato, Swiss cheese, green pepper, pickle relish.

## CHEDDAR CHEESE DOGS

Fully pre-cooked hot dogs  
Hot dog buns  
Cheddar cheese spread

Prepare hot dogs and buns with the Sunbeam Hot Dog and Bun Steamer. Spread Cheddar cheese spread on the inside of the bun. Place steamed hot dog inside bun with cheese. Garnish with chopped onion, pickle relish, tomato ketchup, and mustard, if desired.

## TACO CALIENTE DOGS

Fully pre-cooked hot dogs  
Hot dog buns  
Cheddar cheese, grated  
Lettuce, shredded  
1 medium onion, chopped  
1 medium tomato, chopped  
Prepared taco sauce

Prepare hot dogs and buns with the Sunbeam Hot Dog and Bun Steamer. Place steamed hot dog inside bun. Garnish with cheese, lettuce, onion, and tomato. Top with taco sauce.

## PARTY PIZZA DOGS

Fully pre-cooked hot dogs  
Hot dog buns  
1 small can prepared pizza sauce, heated  
Mozzarella cheese, shredded  
Parmesan cheese, grated  
Chopped onion  
Mushrooms, sliced and cooked (optional)

Prepare hot dogs and buns with the Sunbeam Hot Dog and Bun Steamer. Place steamed hot dog inside bun. Top with Mozzarella cheese, parmesan cheese, onion, mushrooms, and heated pizza sauce.

## CAMP DOGS

Fully pre-cooked hot dogs  
Hot dog buns  
1—1 lb. can pork and beans, heated  
Bacon slices, cooked and crumbled,  
or prepared bacon substitutes  
Cheddar cheese spread

Prepare hot dogs and buns with the Sunbeam Hot Dog and Bun Steamer. Spread inside of bun with Cheddar cheese spread. Place steamed hot dog inside bun with cheese. Heat pork and beans thoroughly. Spoon pork and beans over hot dog and sprinkle with crumbled bacon.

## REUBEN DOGS

Fully pre-cooked hot dogs  
Hot dog buns  
1—16 oz. can sauerkraut, drained and heated  
Swiss cheese, thin sliced  
Horseradish  
Prepared mustard

Prepare hot dogs and buns with the Sunbeam Hot Dog and Bun Steamer. Spread inside of bun with horseradish and mustard. Place thin slices of Swiss cheese inside bun. Place steamed hot dog inside bun with cheese. Top with heated sauerkraut.



## HOW TO GET QUICK SERVICE

If there is a service station in your community you may take your appliance there in person. If not:

1. Pack this product carefully in a good carton with plenty of newspaper or excelsior padding all around it, and tie securely. Damage in transit is not covered by the guarantee.
2. Carefully print on the carton the name and address of the service station nearest you. Don't forget your return address.
3. Put a letter showing service desired in an envelope addressed to the same service station. In your letter please be sure to give full information; such as date and place of purchase, your full name and address, and the service, or repairs, desired.
4. PASTE ENVELOPE TO PACKAGE.
5. Put First Class stamp on envelope, and Parcel Post stamps on package; then mail. (The Post Office will tell you the proper amount of postage and insure you against loss in the mails.)



built with integrity  
backed by service

SUNBEAM APPLIANCE COMPANY, a division of Sunbeam Corporation

® SUNBEAM

© SUNBEAM CORPORATION, 1977 114-300-5486A